



Refilling Your Bath Ball

- 1) Remove your Bath Ball from your tub faucet.
- 2) Separate the two halves of your Bath Ball by snapping apart. Slightly squeezing the top or bottom half may help the two parts separate.
- 3) Remove the old used Filter Foam Power Disk. This old filter can be recycled as copper/zinc metals.
- 4) Place New Refill Power Disk in bottom half of your Bath Ball and snap the two halves together.
- 5) Reposition your Bath Ball below your bath spout and run water through the filter for 5 minutes to activate your Power Disk.

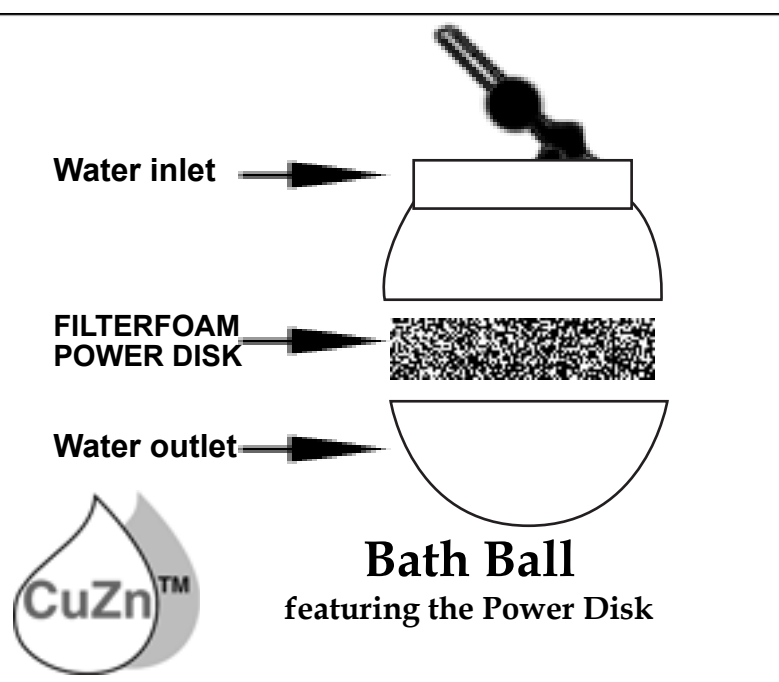

Refilling Your Bath Ball

- 1) Remove your Bath Ball from your tub faucet.
- 2) Separate the two halves of your Bath Ball by snapping apart. Slightly squeezing the top or bottom half may help the two parts separate.
- 3) Remove the old used Filter Foam Power Disk. This old filter can be recycled as copper/zinc metals.
- 4) Place New Refill Power Disk in bottom half of your Bath Ball and snap the two halves together.
- 5) Reposition your Bath Ball below your bath spout and run water through the filter for 5 minutes to activate your Power Disk.

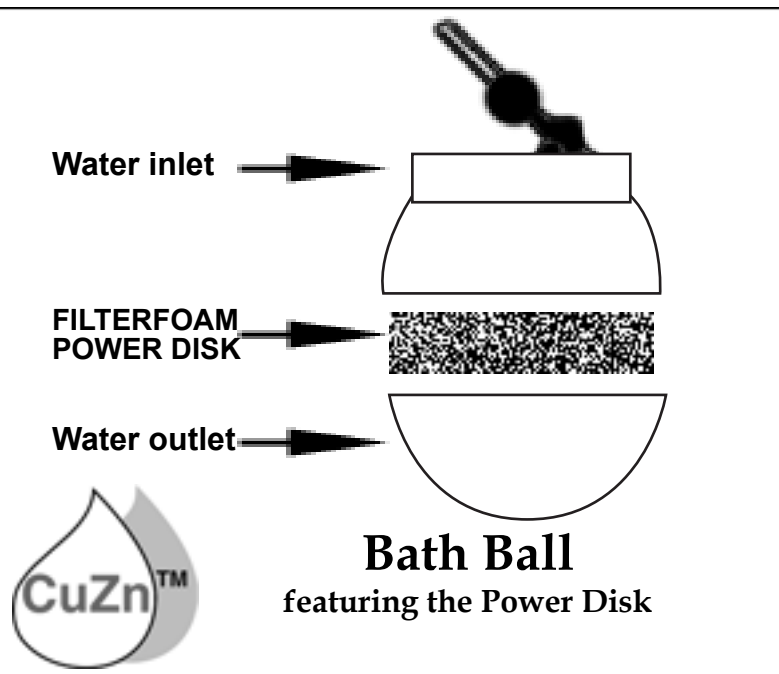

Refilling Your Bath Ball

- 1) Remove your Bath Ball from your tub faucet.
- 2) Separate the two halves of your Bath Ball by snapping apart. Slightly squeezing the top or bottom half may help the two parts separate.
- 3) Remove the old used Filter Foam Power Disk. This old filter can be recycled as copper/zinc metals.
- 4) Place New Refill Power Disk in bottom half of your Bath Ball and snap the two halves together.
- 5) Reposition your Bath Ball below your bath spout and run water through the filter for 5 minutes to activate your Power Disk.

